

W100.RING

Installation diagram

Must be installed by a licensed electrician

50°C

Recommended max.
ambient temperature


Step 1

Using a Ø30MM hole saw, cut a hole in the wall at the desired location.




Step 2

Insert the mounting box into the wall.

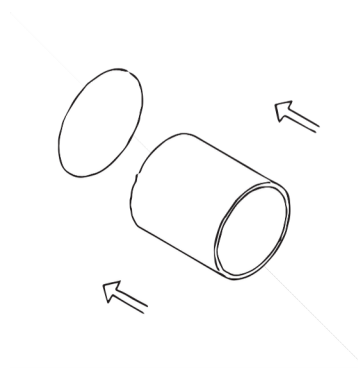


Step 3

Plug the driver into a mounted general power outlet (GPO) in the wall. Ensure there is enough wire length for ease of serviceability.

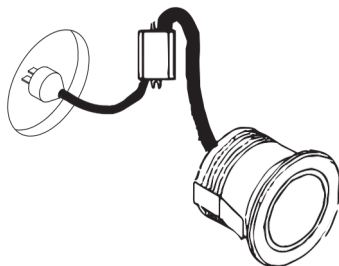

Step 4

Insert the luminaire into the mounting box.

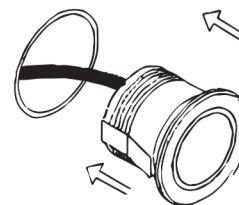

Step 5

Installation Complete.

